

Pet Door Panel

Installation Manual



Components:

- Pet Door Panel
- Panel Latch Assembly
- Foam Weather-stripping
- Glass Sweep
- (4) Binding Posts
- (6) #6 x 1/2" Sheet Metal Screws
- (4) 8-32 x 1/2" Flat Head Machine Screws
- Closing Panel



Pet Door
Panel

Other items you will need:

- Drill
- Safety Glasses
- 1/8" Drill Bit
- 7/32" Drill Bit
- Phillips Head Screwdriver
- Flat Head Screwdriver
- Scissors
- Scribe or Nail

**Please read all instructions before starting installation.
See note on page 7 regarding panel for
96" Pet Door Panels.**

Remove all packaging materials from Pet Door Panel, including the cardboard spacers under the Height Adjuster.

The Closing Panel will attach to either side of the Pet Door Panel depending on whether you have a right-opening or left-opening sliding glass door.

The Pet Door Panel inserts into the opening in your sliding glass door against the door jamb. Your sliding glass door will then close flush against, and latch to, the Pet Door Panel.

Determine if the Pet Panel Door will lock on the left or right side by placing the Latch Mounting Holes TOWARD your sliding glass door.

This illustration is for a left-opening sliding glass door. Reverse Pet Door Panel for a right-opening door.

Step 1:

Set the Pet Door Panel in the sliding glass door track. Place the top of the Pet Door Panel in the top door track groove. Compress the spring loaded Height Adjuster by pushing the Pet Door Panel up and placing the bottom of the Pet Door Panel into the bottom track groove.

Slide the Pet Door Panel against the door jamb. The Pet Door Panel should fit flush against the door jamb without any gaps.

NOTE: Your sliding glass door MUST fit flush against the Pet Door Panel in order for the Panel Latch to work properly. Remove original sliding door latch if necessary for a flush fit.



Step 2:

Drill 1/8" holes through the 4 pre-drilled holes (2 on the interior side, 2 on the exterior side) on the Height Adjuster.

Secure the Height Adjuster to the Pet Door Panel with (4) #6 x 1/2" sheet metal screws.

CAUTION: Make sure you are satisfied with the fit of the Pet Door Panel before drilling.



Step 3:

Since there are several models of sliding glass doors your Pet Door Panel can be secured by one of the following methods.

A. Along the top and bottom of the door frame, drill (2) 1/8" holes through the door frame and into the Pet Door Panel. Fasten the door frame to the Pet Door Panel using (4) #6 x 1/2" sheet metal screws.

B. Use an "L" bracket at top and bottom.

C. Screw down the side of the door jamb into the Pet Door Panel.




If your sliding glass door jamb has a recessed door track, you must follow step B or C. Longer sheet metal screws and the “L” bracket may be purchased at most hardware stores.

Step 4:

The Glass Sweep should be installed onto the BACK EDGE of your sliding glass door to form a seal between the sliding glass door and the stationary part of the door. At the top of the door, position the Glass Sweep with the flexible part touching the glass. Carefully peel the backing and press the Glass Sweep in place as you move down to the bottom of the door. Trim excess with scissors.

WEATHER-STRIPPING:

Clean the edges of the sliding glass door, position the weather-stripping at the top of the door, carefully peel the backing and press the weather-stripping in place as you move down the bottom of the door. Trim any excess with scissors.

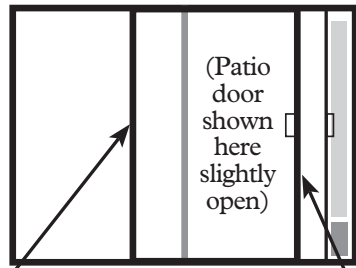

Install Glass Sweep here
Install Weather-stripping here



Step 5:

Attach the half of the Latch with handle to the Pet Door Panel using (2) Binding Posts and (2) 3/4" Machine Screws. For security, the Binding Post should enter from the outside of your house and the screws from the inside.




Close your sliding glass door against the Pet Door Panel. Connect the Latch parts together by closing the handle so it catches the other half of the lock. Mark the location you will need to drill to mount the other half of the lock by marking the hole with a nail or a scribe.



Attach by drilling (2) 7/32" holes in marked locations. Use (2) Binding Posts and (2) 3/4" machine screws, again placing the screws inside your house.

Now close your door and flip the lever to see if everything aligns properly. Minor adjustments can be made by loosening the screws, adjust accordingly and then retightening the screws.

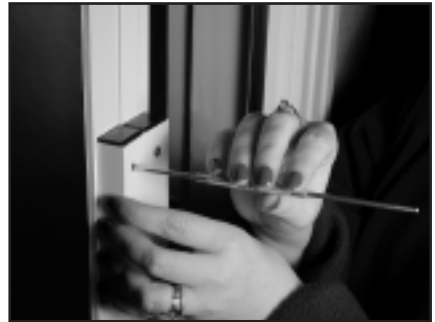


CAUTION: DO NOT DRILL THROUGH YOUR GLASS DOOR FRAME IF THERE IS ANY CHANCE OF HITTING GLASS!

If necessary, drill a small pilot hole to make sure you have enough clearance.

General rule: No more than 1" into frame.

For 96" Pet Door Panels

Remove the 4 screws from the connection bar mounted on the bottom sections of the door. Align and slide TOP section of panel to the BOTTOM section. Reinstall and tighten the 4 screws just removed through the Top sections of the connector bar.

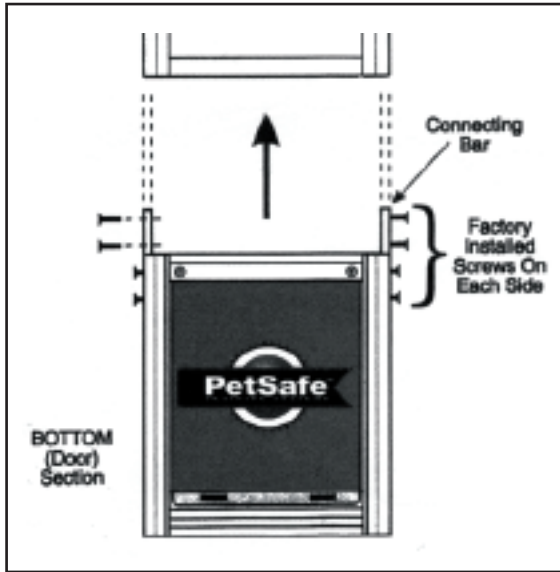

Replacement Flaps

Replacement flaps can be purchased at your local retailer or by contacting Customer Service at 1-800-732-2677.

Radio Systems Corporation
10427 Electric Avenue
Knoxville, TN 37932

1-800-732-2677
www.petsafe.net

Customer Service Hours
Eastern Standard Time
Monday - Friday
8 am to 8 pm

400-558/1